


Rockworx Audio Zone Paging System Quick Reference Guide

System Power Up/Basic Operation

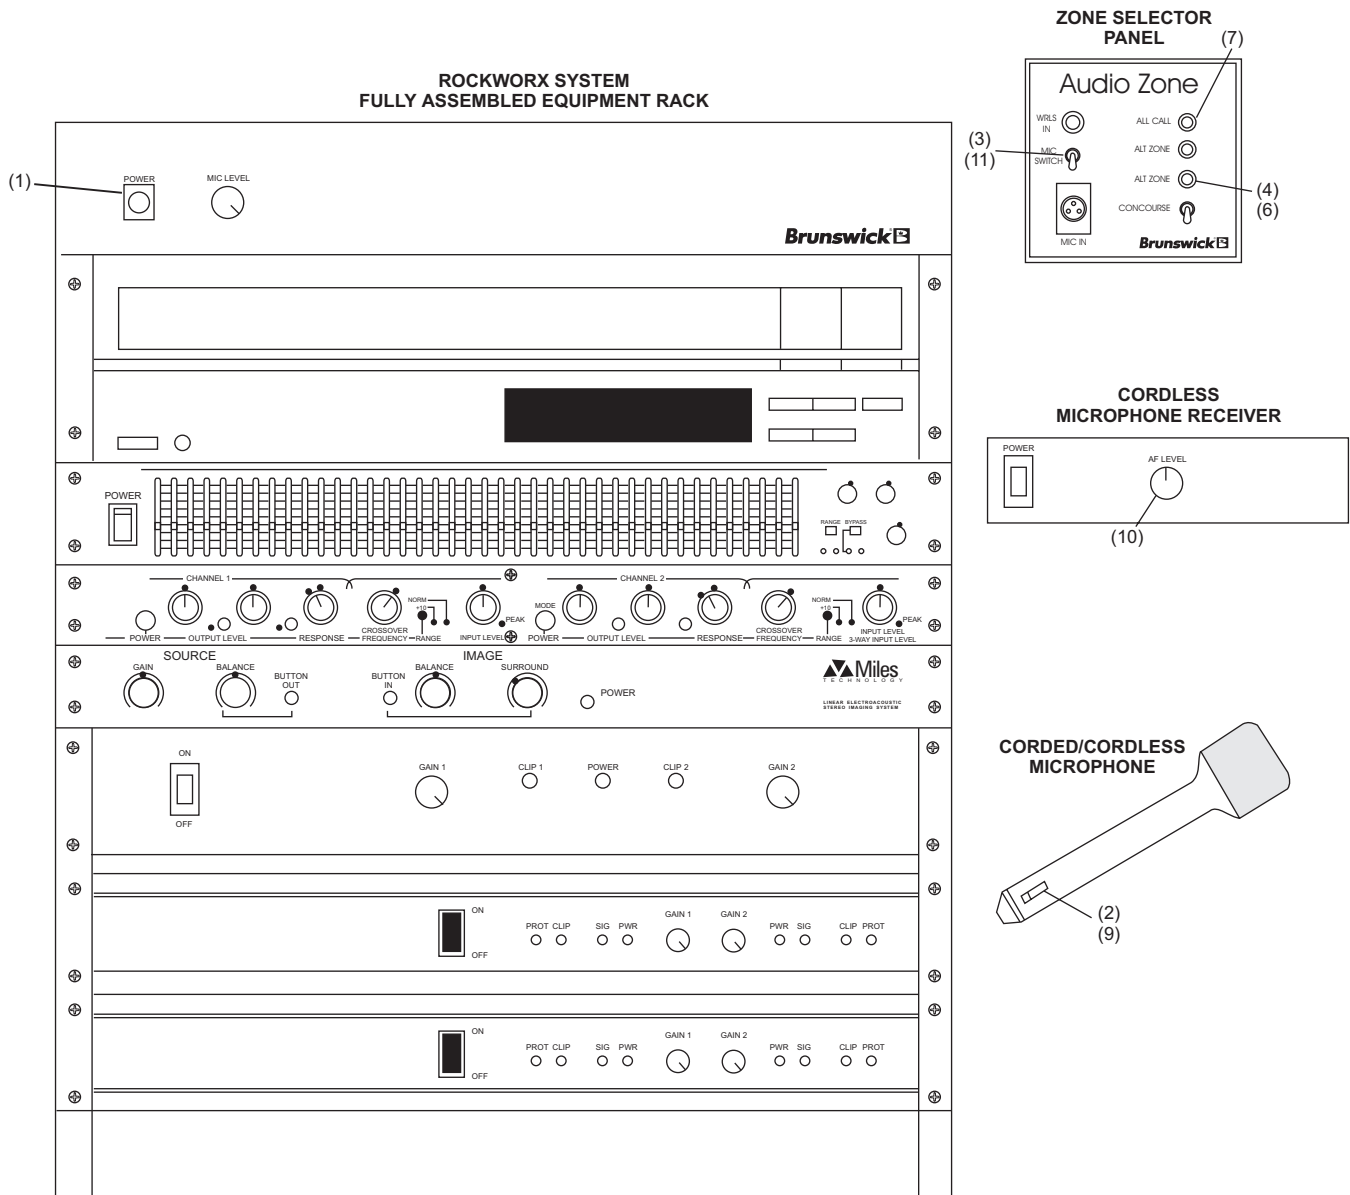

NOTE: Audio Zone Controller must be on to use Rockworx sound system and/or paging system.

1. Verify that POWER button on Audio Zone Controller is on (button is lit).
2. Place microphone switch to ON position.
3. Place MIC switch to down (gooseneck) position.

4. Press momentary switch (Zone Selector Panel) for desired zone.
5. Make announcement.
6. Release momentary switch.

To make an "All Call" page:


7. Press ALL CALL switch.
8. Perform steps 5 and 6.

Optional Cordless Microphone:

9. Make sure cordless microphone switch is ON.
10. Set AF LEVEL knob on front of receiver to 12 o'clock position, rotate clockwise to increase mic volume.
11. Place MIC switch to up (wireless) position.

Rockworx Audio Zone Paging System Quick Reference Guide

Balancing Rockworx and Audio Zone Speakers

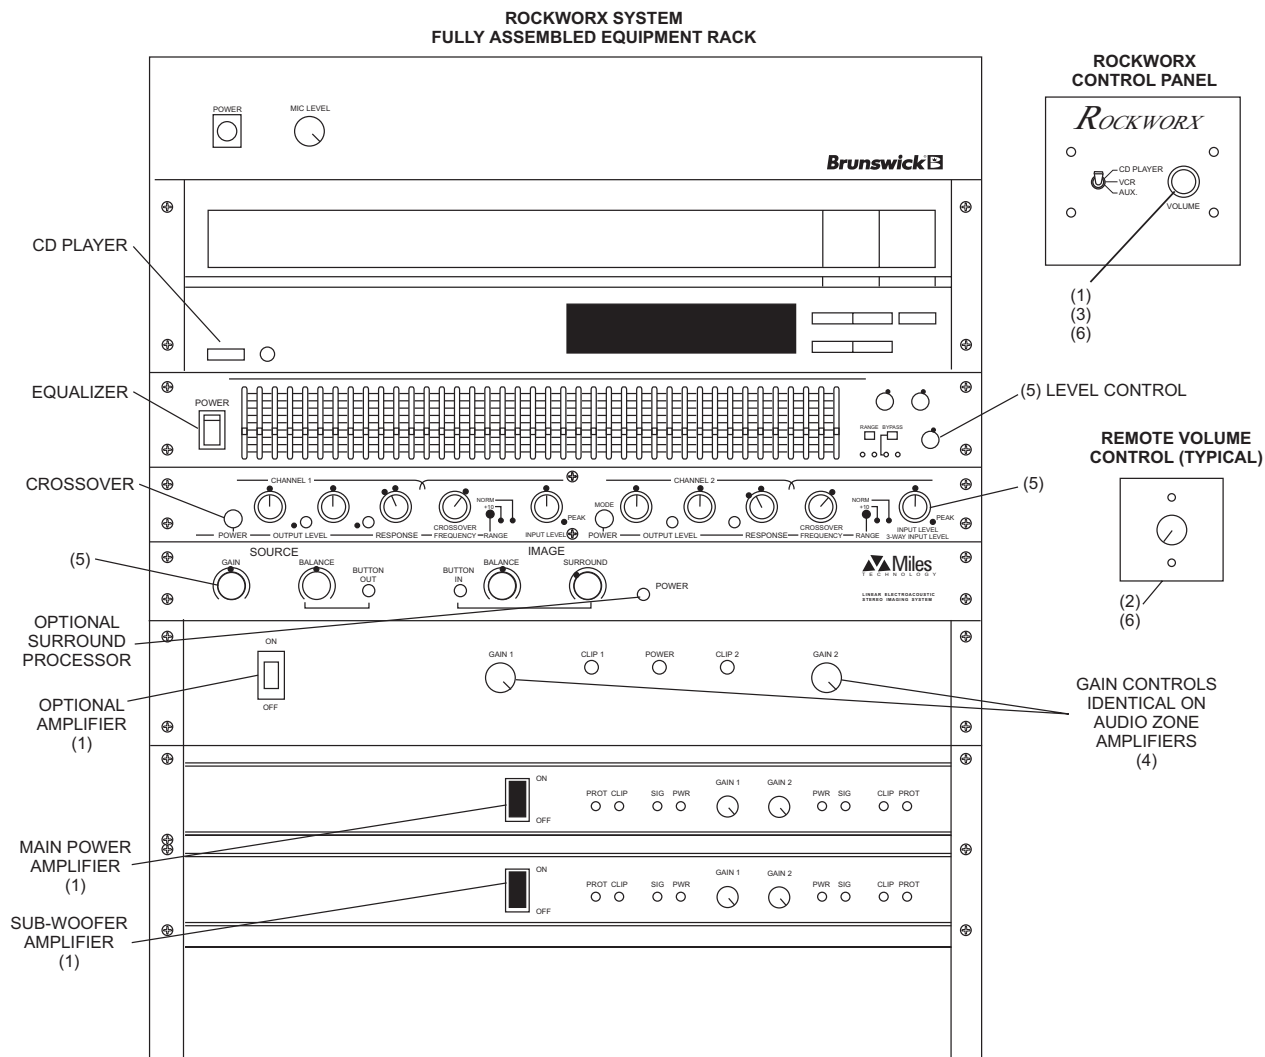

Once the microphone has been tested and it has been verified that all of the zone speakers are working, the following steps will have to be performed *IF* there is an improper balance between the Rockworx and the zone speakers.

1. With all the amplifiers turned on and a music source playing, rotate the volume control knob on the Rockworx control panel to the 12 o'clock position.
2. Go to each zone and turn the remote volume control assemblies all the way up (clockwise). Listen to the music output from the zone speakers. There should be a moderate amount of signal (music) present.
3. If a moderate amount of music is present at the zone speakers, return to the Rockworx control panel and turn the volume control knob fully clockwise.
4. Return to each zone and listen to the zone speakers to ensure there is no distortion present. If distortion is present, lower the GAIN control knobs **ONLY** on the Audio Zone amplifiers until the distortion disappears.
5. If there is **NOT** an adequate music level in the zones, perform the following:
 - a. At the front of the Rockworx equipment rack, rotate the level control knob on the equalizer to the 9 o'clock position.
 - b. Listen to the Rockworx speakers and if they are not loud enough, slowly rotate the GAIN knob on the surround processor or the INPUT LEVEL knob on the crossover (non-surround system) until the volume of the Rockworx speakers is sufficient.
6. Lower the volume control knobs on the Rockworx control panel and the remote volume control assemblies to the desired level.