


Rockworx Quick Reference Guide

System Power Up/Basic Operation

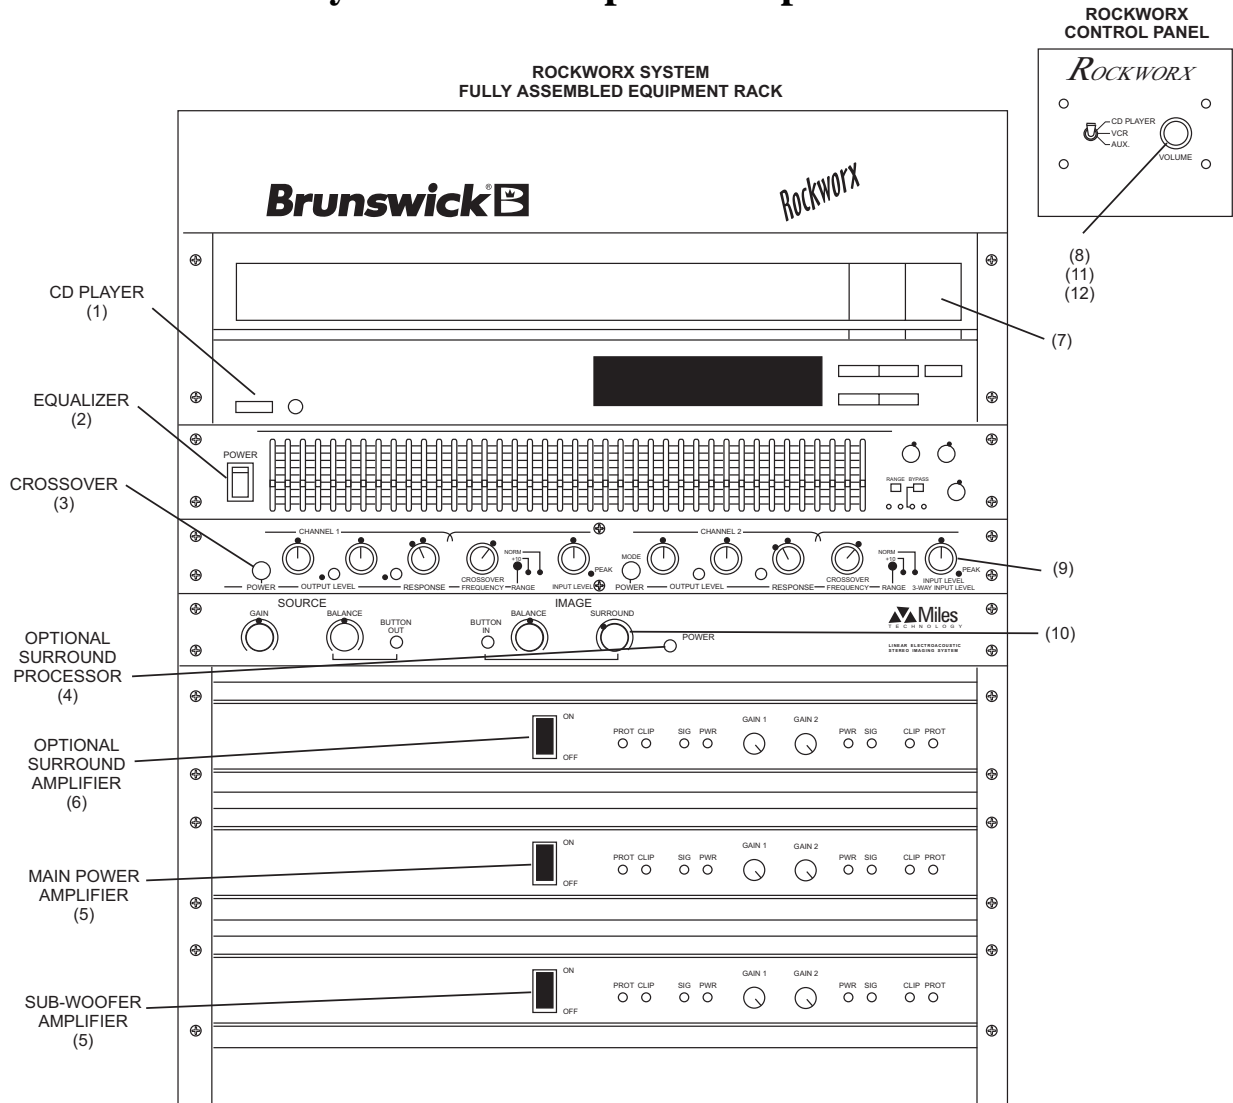


CAUTION: Due to extremely high bass levels, advisory CDs having a red label on CD case are NOT recommended for use with Rockworx systems.

1. Press POWER button on CD Player.
2. Press POWER switch on Equalizer.
3. Press POWER button on Crossover.
- *4. Press POWER button on optional Surround Processor.
5. Place ON/OFF switch to ON for Main Power Amplifier and place ON/OFF switch to ON for Sub-Woofer Amplifier.
- *6. Place ON/OFF switch to ON for optional Surround Amplifier.
7. Insert CD and press PLAY.
8. Turn volume control on Rockworx Control Panel to full up position.
9. Raise or lower INPUT LEVEL on Crossover to adjust Main Amplifier setting.
- *10. Raise or lower Surround volume control to adjust level of optional surround speakers.
11. Turn volume control on Rockworx Control Panel down to acceptable level.
12. For day-to-day use, simply turn volume control (12) full down to turn off sound.

NOTE: If system shut-down is necessary, turn amplifiers (5, 6, and 7) off FIRST!

*Perform only with Optional Surround System.

Control Settings/Adjustments

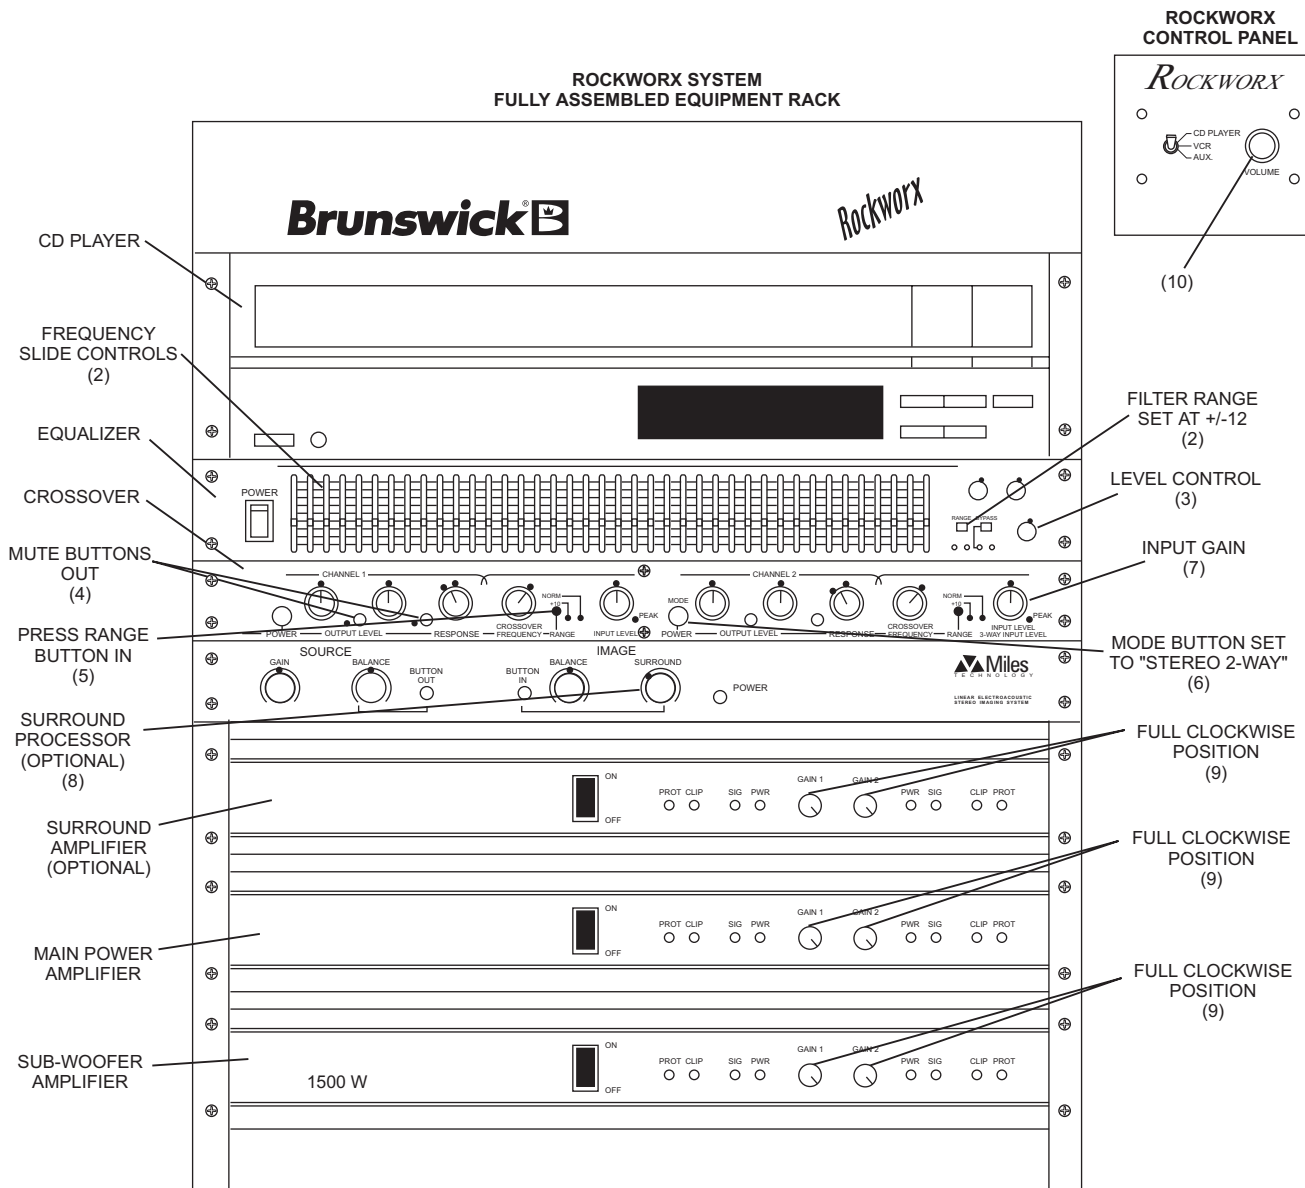

EQUALIZER

1. Place Frequency Slide Controls to mid-range, then adjust to user preference.
2. Filter Range set at +/-12.
3. Level Control set to 0 (zero).

CROSSOVER

4. Mute Buttons Out.
5. Range Button In.
6. Mode Button set to "Stereo 2-Way."

7. Raise or lower Input Gain control to adjust amplifier settings.

OPTIONAL SURROUND PROCESSOR

8. Raise or lower Surround volume control to adjust surround speakers.

MAIN POWER/ SUBWOOFER/ SURROUND AMPLIFIER

9. Gain controls set to full up position.

ROCKWORX CONTROL PANEL

10. Raise or lower volume control to adjust sound level for entire system.

NOTE: If humming is present, lower Input Gain control (7).

Black dots (•) indicate initial settings but they can be varied slightly.

